



Unplug the power cord from the power supply.



Remove the bezel.



Remove 2 film holders and install/place film.



Re-intall film holders and bezel.